

MAINTENANCE INSTRUCTIONS For Chemline Ball Check Valves and Ball Foot Valves Sizes 1/2" to 4"

Maintenance

Refer to dwg. <u>APR-050 or ASSEMBLY DRAWING BC-003 rev.0</u> and proceed as follows:

- Loosen union nut (5) and remove valve from line. (Note: make sure there is no pressure in line prior to removing valve.)
- 2. <u>Important</u> Hold seat/seal (3) in place while removing valve, as the seat, stop ring (6) and ball (2) may fall out.
- 3. Remove seat (3), stop ring (6) and ball (2). Inspect for excessive wear. The ball should not show signs of wear or deformation.
- 4. When re-installing ball (2), stop ring (6) and seat (3), check inside body for any foreign debris that may have become lodged in the valve.
- 5. Replace union nut (5) and tighten.
- 6. For Foot Valves with strainer baskets, remove basket (7) and clean thoroughly.



